

Firmware Download User's Manual

Product : CP-100G (GSM/GPRS)

Ver 0.9

2009. 02

This material is owned and copyright by CUMAN . You do not distribute, modify, reproduce or use any images, in whole or in part, without the prior allowance from CUMAN. Copyright © 2008 CUMAN Co., Ltd.

CUMAN Co., Ltd
LBS Device and Solution



Firmware Download

1) Double click on



icon on your PC or run the program 'Cp100FDown.exe'.

Download start button

Displaying current status

Message window



File select button


Download stop button



How to download firmware




2) Click **'FileOpen'** and select firmware file of which extension name is **'cof'** (*.cof).

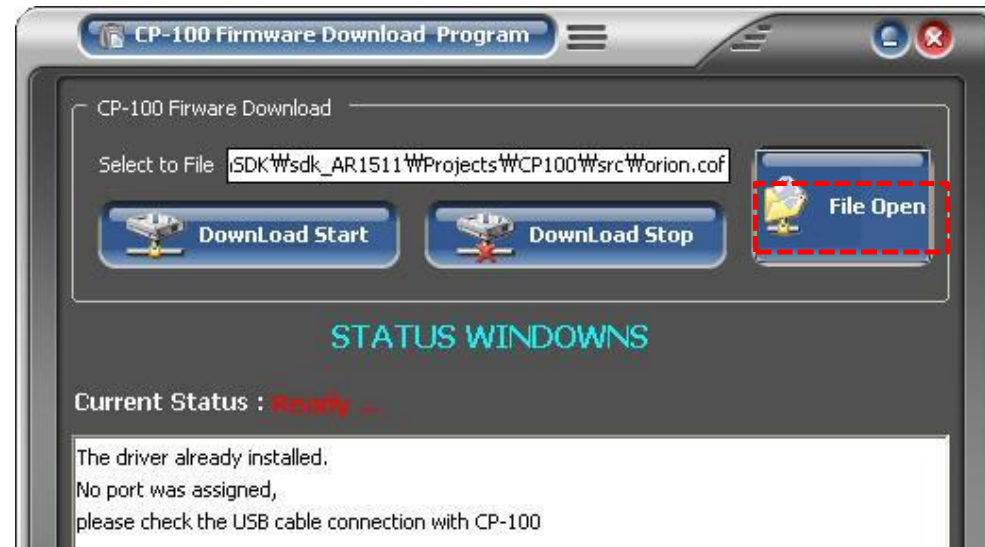

3) After selecting firmware file, connect CP-100G with your PC by USB Power/data cable.

Make sure your device, CP-100G is power-off before starting download of firmware.

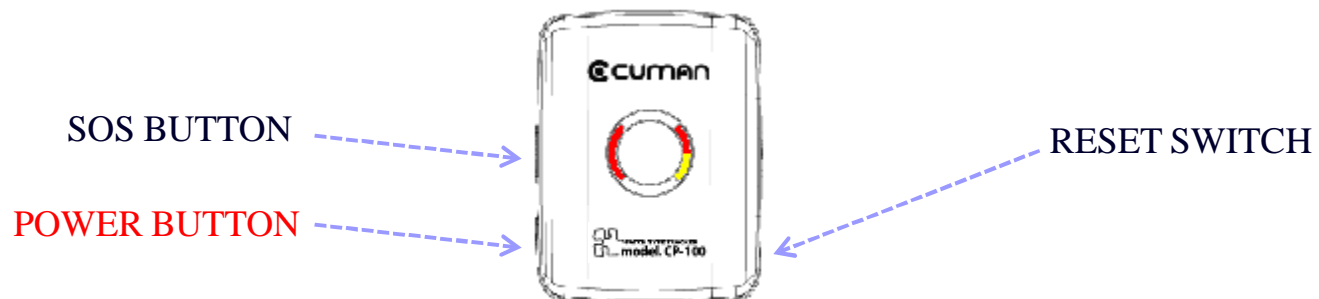




How to download firmware



4) After making CP-100G be power-off, Click **Download Start**.

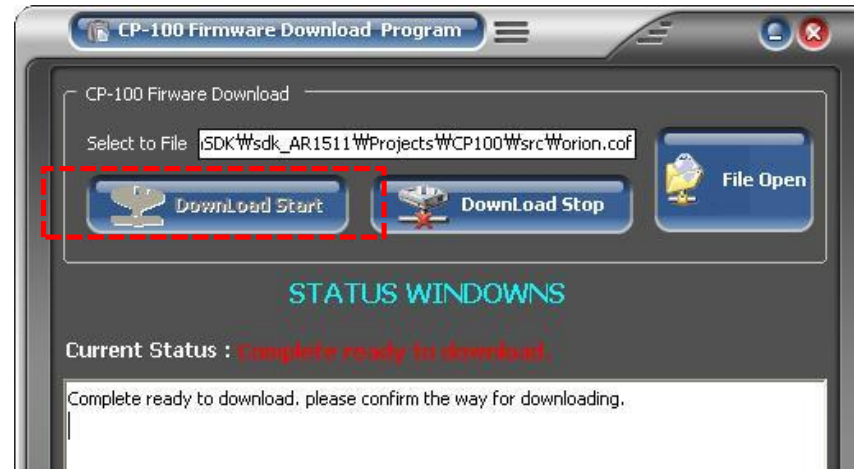

In case of ERROR window appearing

Disconnection with CP-100G



Not select file



When ERROR window appears, click **Download Stop**, and make sure of connection status or firmware file selection. Then click **Download Start**.



How to download firmware



- 4.1) Press and hold **SOS button**, press and hold **POWER button** while you are pressing SOS button until download is completed, which shall take about 20 seconds.
- 4.2) You can see the progress in downloading as below window.

Tip 1. If any of SOS & POWER button was released during download, it shall not be completed.


Tip 2. During process of download, all of LED lights of CP-100G shall be on.



< Proceeding Download Window >



< Download Completion Window >

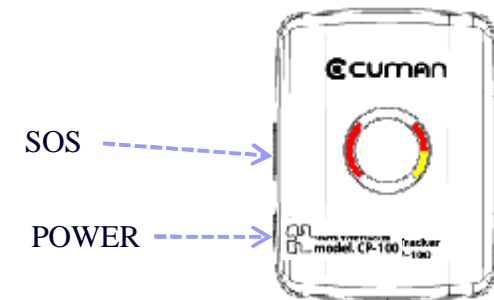




How to download firmware



5) How to start it again in case of download ERROR

Download ERROR may be occurred if USB cable was plug out from the PC or CP-100G in the downloading. If below windows shall appear on your PC then you have to need to repeat the whole procedures of clause 4).

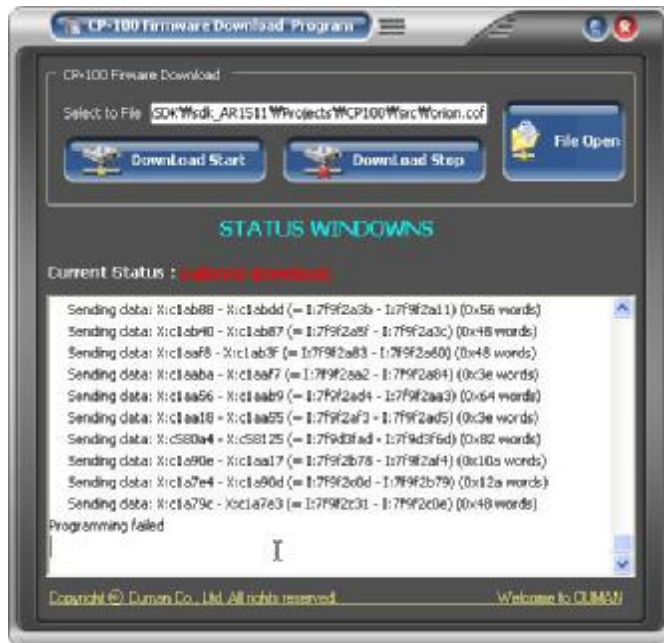

6) Download Completion

When download is completed, disconnect CP-100G from your PC.

After download, please refer to User's Manual for CP-100G to use it.